


**INSTALLATION, OPERATING & MAINTENANCE INSTRUCTIONS** 

# M1-4405 (MK 8706)


CROSS HANDLE with "LB" LOGO THERMOSTATIC WITH LEVER FLOW CONTROL TRIM ONLY, TO SUIT M1-4201 ROUGH

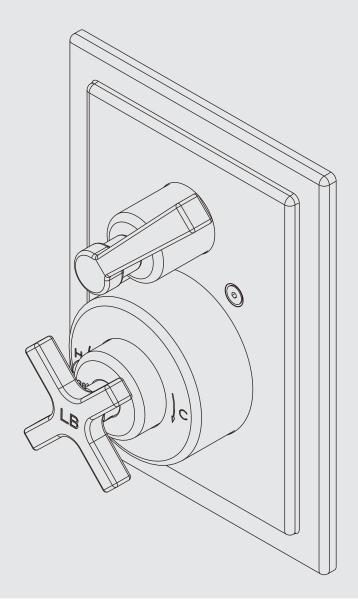


LEFROY BROOKS

# **Contents**


Dimensions		3
Installation Proced	dure	4
Parts List		7
Fault Finder		8
Safety Tips, Care	and Maintenance	ç
Guarantee		10

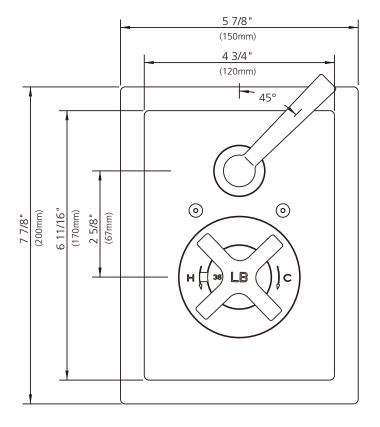

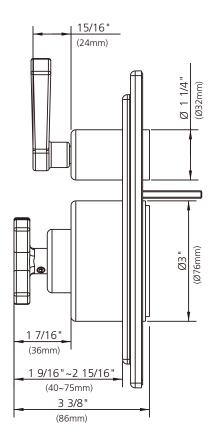


Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

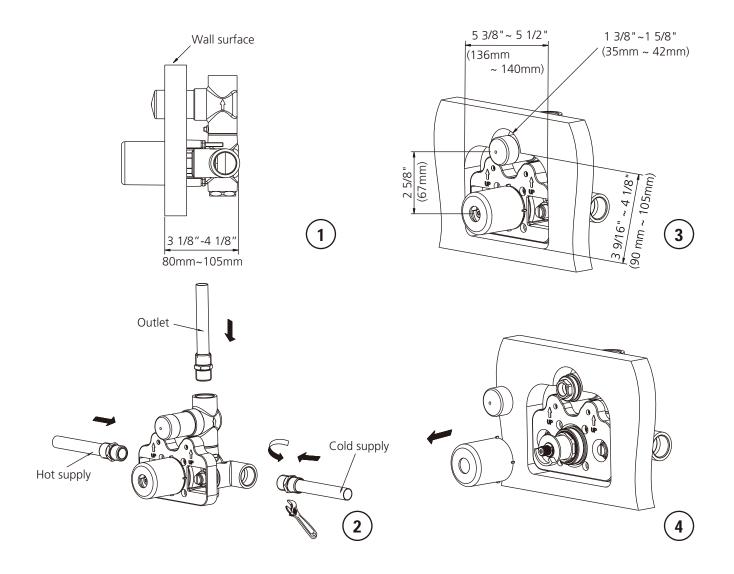


- 1 Before installing the valve into the wall, please note that a distance between 80mm~105mm from the wall surface to the rear of the valve should be left so that the trim can be fitted correctly.
- 2 Install valve assembly into the wall.
- 3 Cut a hole on the wall surface for fitting the trim kit. The hole dimension is as shown in figure 3.
- 4 Throw away the protective caps only when building construction is completed and you are ready to fit the trim kit in.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

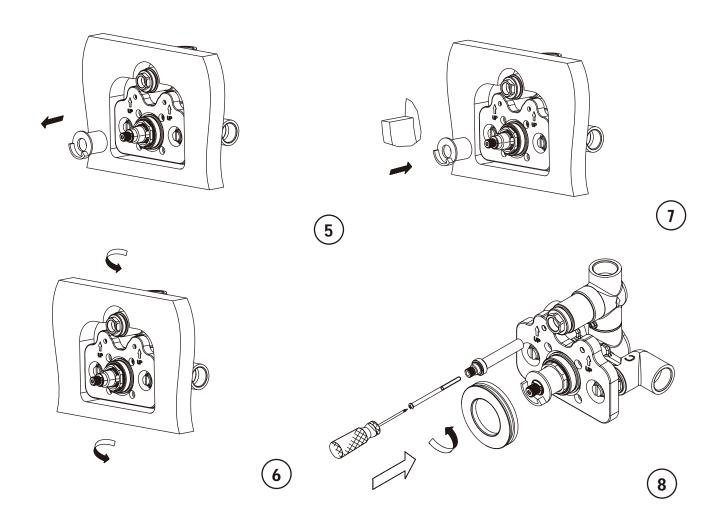


- **5** Take out the stopper.
- Turn on the flow controller. Turn the thermostatic cartridge until the water temperature is at 38. Suggestion: attach a hose to the outlet and guide water to basin or a receiver to get the temperature and prevent it from wetting the floor.
- 7 Turn off the water supply. Install the stopper and make sure its "B" plane as shown is horizontal and on the left side.
- **8** Fix the stem extension and the adjusting ring.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

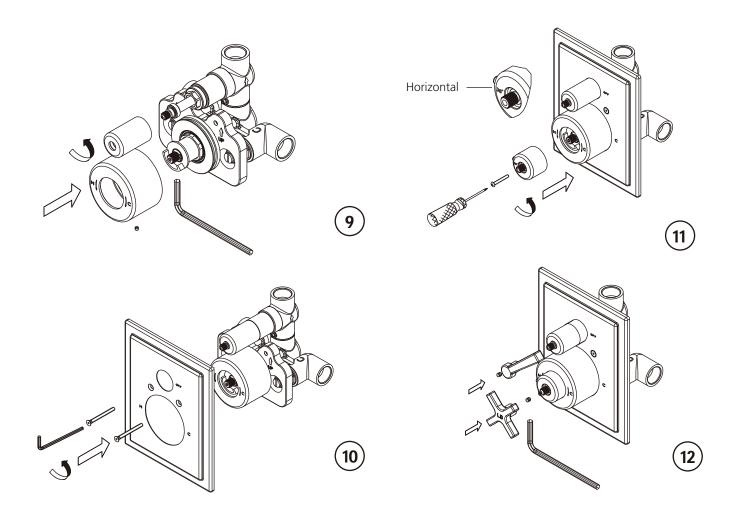

- 9 Install the canopies.
- **10** Fix the front plate with screws.
- **11** Fix the canopy with screw. When it is fixed, check that the temperature-limit-button is in the horizontal position.
- **12** Install handle assembly with set screws.

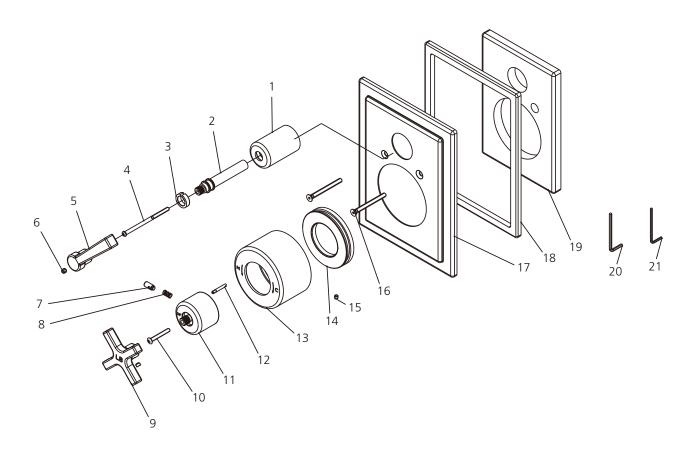

1	Canopy (018960)	12	Pin (003147)
2	Stem extension (110386)	13	Canopy (018959-52)
3	Clip (012242)	14	Adjusting ring (104295)
4	Screw (008196)	15	Set screw (065086)
5	Handle (029686)	16	Screw (008186)
6	Set screw (292598)	17	Front plate (006584)
7	Limit button (036272)	18	Oil seal (010940)
8	Spring (005157)	19	Spacer (013816)
9	Handle (029685-51)	20	Allen key (031000)
10	Screw (008994)	21	Allen key (031003)
11	Adaptor (067960-50)		,

# **Fault Finder**

Fault	Cause	Rectification
Wobbling of handle.	The fixing screw comes loose.	Check for fixing screw and re-tighten it properly.
Wobbling of canopy.	The canopy comes loose.	Check and tighten the canopy.

### Safety Tips, Care and Maintenance

#### **Safety Tips**

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

#### **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

#### Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.

#### Maintenance

Your new bathroom faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

#### **Routine Maintenance**

The frequency and extent of attention required will vary according to prevailing site and operational conditions, however a 12 monthly maintenance schedule is recommended.

If the product has operated satisfactorily for some time, but performance has been degraded, please check the Fault Finder section to identify the problem.

#### **Maintenance Check List**

- Worn or damaged seals and washers
- Damaged seal faces
- Thread wear
- Incorrect adjustment
- Component failure
- Debris or limescale build-up

### **Guarantee**

#### **Guarantee of Quality**

This product is guaranteed against faulty materials and workmanship for 12 months from date of purchase. For the guarantee to be valid, the unit must be installed by a competent person, in accordance with the instruction booklet.

Any part found to be defective during the guarantee period, will (at our option) be repaired or replaced, free of charge, provided the unit has been installed, and properly used in accordance with the instruction booklet.

Our products correspond to the valid technical and water supply standards as well as the relevant approvals requirements. We guarantee them to be free of design and production faults at the time of delivery and that with correct use and care in accordance with our printed instructions they will function reliably.

#### **Guarantee period**

- The guarantee is valid in private homes for 5 years from the purchase date. Proof of purchase has to be provided when making a guarantee claim.
- By use in commercial or institutional applications the guarantee is valid for 1 year after first use.

To make a guarantee claim, proof of purchase or, the beginning of use is required.

#### Not Covered by this Guarantee

Damage or defects arising from incorrect installation, improper use or lack of maintenance. Installed product damaged in transit Consequential loss, damage or product removal and installation costs.

Lefroy Brooks is not responsible for any on site labour charges.

### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www. lefroy brooks. com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177