

INSTALLATION, OPERATING & MAINTENANCE INSTRUCTIONS

X1-2055


ZU KITCHEN MONO WITH PULL-OUT HANDSPRAY



LEFROY BROOKS


Contents

Dimensions		3
Installation Proced	lure	4
Parts List		7
Fault Finder		8
Safety Tips, Care a	and Maintenance	ç
Guarantee		10

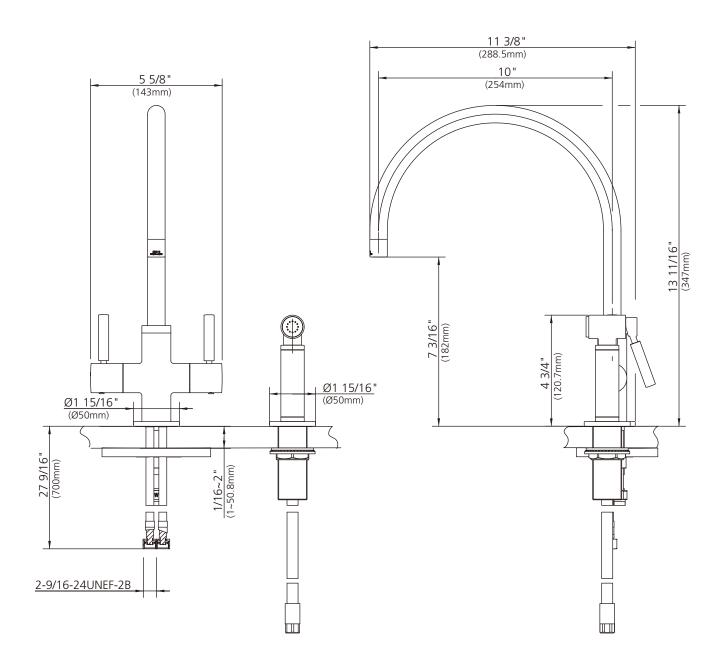

Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

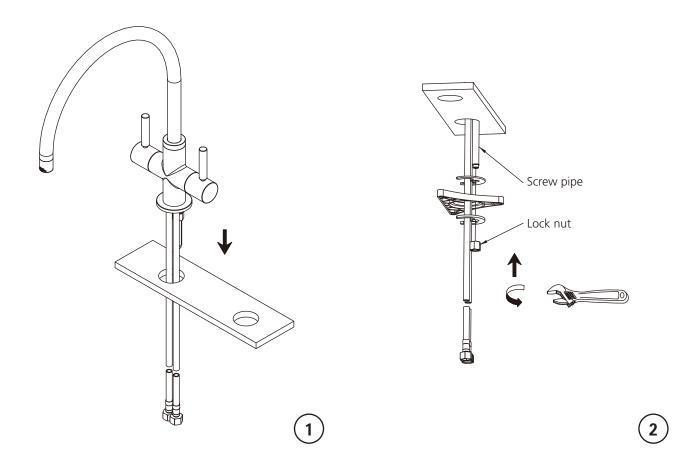


- 1 Put base under the bottom of faucet. Install faucet through deck hole.
- **2** From underneath the sink, install washers and tighten with wrench.

Warning! When installing flexble hose, please notice:


- 1. There should be no torsion or deformation.
- 2. Do not fold into a V or L shape.
- 3. Do not use if there is any crack or deformation.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

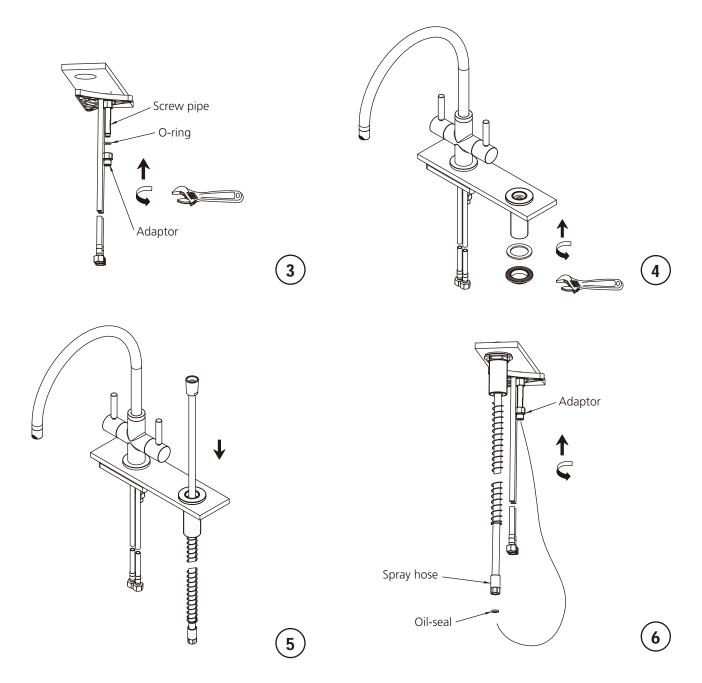


- 3 Tighten the adaptor to screw pipe tightly. Ensure o-ring is inserted.
- 4 Install spray holder in sink deck: insert the spray holder from above into the mounting hole. Tighten with lock nut.
- 5 Insert spray hose through spray holder.
- 6 Attach oil-seal to the adaptor. Then connect hose to the adaptor tightly.

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

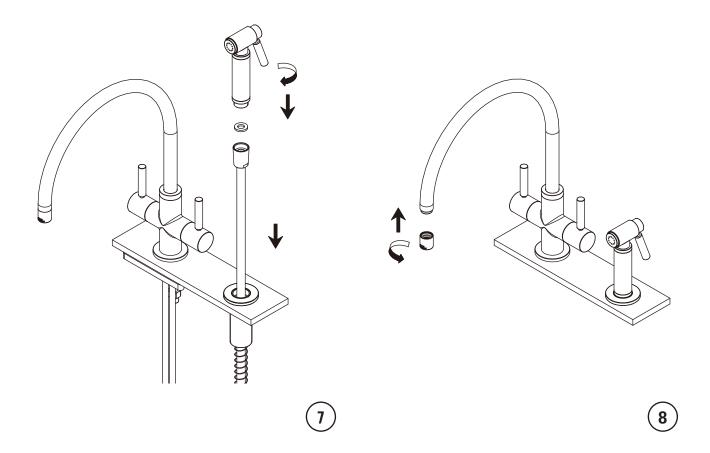

- **7** Screw side spray onto spray hose. Ensure oil-seal is inserted.
- After installing faucet, remove aerator and open the hot and cold water supplies. Check for leaks. Turn on faucet handles for one minute to flush debris from faucet. Close the handles and re-assemble the aerator.

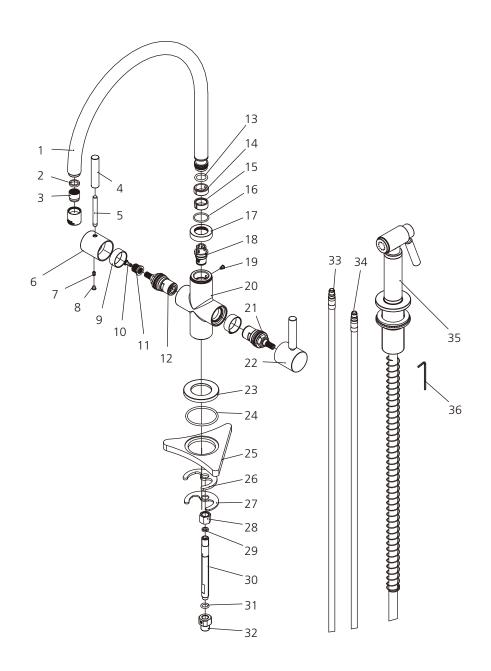

- 1 Spout assembly (139060W-54)
- 2 Oil seal (010519N)
- 3 Aerator insert (553661N)
- 4 Handle sleeve (038104)
- 5 Handle stem (108926)
- 6 Handle seat (H) (215502-50)
- 7 Set screw (292562)
- 8 Plug (028008)
- 9 Nut (009267)
- 10 Screw (008154)
- 11 Adaptor (205469)
- 12 Cartridge (H) (507175W)

- 13 O-ring (004005N)
- 14 Clip (012060)
- 15 Clip (012112N)
- 16 O-ring (004109N)
- 17 Shroud (000128)
- 18 Diverter (501213 N)
- 19 Screw (085015)
- 20 Body (002782W)
- 21 Cartridge (C) (507176W)
- 22 Handle seat (C) (215502)
- 23 Escutcheon (303459)
- 24 O-ring (004072N)

- 25 Triangle washer (060063)
- 26 Washer (013973)
- 27 Washer (013686)
- 28 Nut (054062)
- 29 Oil seal (010737N)
- 30 Screw pipe (017974)
- 31 O-ring (004031N)
- 32 Adaptor (057434W)
- 33 Flexible hose (C) (105809W)
- 34 Flexible hose (H) (105808W)
- 35 Hand spray (533135W)
- 36 Allen key (031003)

Fault Finder

Fault	Cause	Rectification
Leaks around handle.	Cartridge has come loose or damaged.	Tighten/reinstall the cartridge or replacement the cartridge if it is damaged.
Leaks around the base of spout.	Gasket is misfitted or damaged.	Check for gasket placement.
Aerator leaks or has an inconsistent water flow pattern.	Aerator is dirty or misfitted.	Unscrew the aerator to check rubber packing or replace the aerator.
Too low flow of the side spray.	Spray heads clogged.	Remove and clean spray heads. May need to replace if clogged.

Safety Tips, Care and Maintenance

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should be equalized by a plumber in accordance with best practice and legislation.

Maintenance

Your new bathroom faucet is designed for years of trouble-free performance. Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Routine Maintenance

The frequency and extent of attention required will vary according to prevailing site and operational conditions, however a 12 monthly maintenance schedule is recommended.

If the product has operated satisfactorily for some time, but performance has been degraded, please check the Fault Finder section to identify the problem.

Maintenance Check List

- Worn or damaged seals and washers
- Damaged seal faces
- Thread wear
- Incorrect adjustment
- Component failure
- Debris or limescale build-up

Guarantee

Guarantee of Quality

This product is guaranteed against faulty materials and workmanship for 12 months from date of purchase. For the guarantee to be valid, the unit must be installed by a competent person, in accordance with the instruction booklet.

Any part found to be defective during the guarantee period, will (at our option) be repaired or replaced, free of charge, provided the unit has been installed, and properly used in accordance with the instruction booklet.

Our products correspond to the valid technical and water supply standards as well as the relevant approvals requirements. We guarantee them to be free of design and production faults at the time of delivery and that with correct use and care in accordance with our printed instructions they will function reliably.

Guarantee period

- The guarantee is valid in private homes for 5 years from the purchase date. Proof of purchase has to be provided when making a guarantee claim.
- By use in commercial or institutional applications the guarantee is valid for 1 year after first use.

To make a guarantee claim, proof of purchase or, the beginning of use is required.

Not Covered by this Guarantee

Damage or defects arising from incorrect installation, improper use or lack of maintenance. Installed product damaged in transit Consequential loss, damage or product removal and installation costs.

Lefroy Brooks is not responsible for any on site labour charges.

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177