

#### INSTALLATION INSTRUCTIONS

## M1-2200

CROSS HANDLE 5-HOLE BATH SET & PULL-OUT BLACK HAND SHOWER WITH DECK DIVERTER TRIM ONLY, TO SUIT R1-4006 ROUGH

## M1-2202

LEVER 5-HOLE BATH SET & PULL-OUT BLACK HAND SHOWER WITH CROSS HANDLE DECK DIVERTER - TRIM ONLY, TO SUIT R1-4007 ROUGH

### M1-2204

CROSS HANDLE 5-HOLE BATH SET & PULL-OUT METAL-FINISH HAND SHOWER WITH DECK DIVERTER TRIM ONLY, TO SUIT R1-4006 ROUGH

## M1-2206

LEVER 5-HOLE BATH SET & PULL-OUT METAL-FINISH HAND SHOWER WITH CROSS HANDLE DECK DIVERTER - TRIM ONLY, TO SUIT R1-4007 ROUGH

### M1-2207


CROSS HANDLE 5-HOLE BATH SET & PULL-OUT WHITE HAND SHOWER WITH DECK DIVERTER TRIM ONLY, TO SUIT R1-4006 ROUGH

## M1-2209

LEVER 5-HOLE BATH SET & PULL-OUT WHITE HAND SHOWER WITH CROSS HANDLE DECK DIVERTER - TRIM ONLY, TO SUIT R1-4007 ROUGH



### **Dimensions** in Inches (& Millimetres)

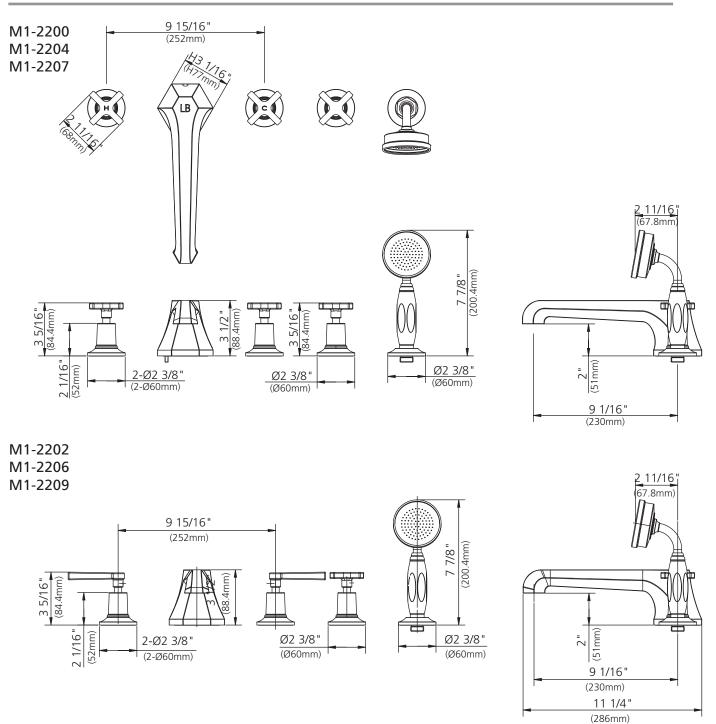

Whilst every effort is made to ensure accuracy, design and dimensions are subject to change without notice as part of the company's product development process.

## What you need to know

#### **Tools:**

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



#### **Maintenance**

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

#### Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

#### **Important Points**

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.


#### **Things You May Need**

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

#### **Standards**

IAPMO/cUPC Listed Meets A112.18.1


#### **Flow Rate**



## Steps 1-2

### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

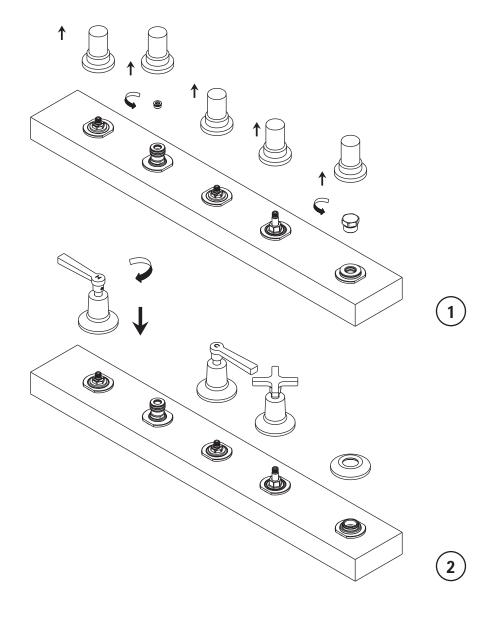


- Make sure that main water supply is shut off before further installation. Take off all rubber protective caps, plugs from valves, as well as the underneath protective bubble bags.
- Install handles.

## Steps 3-4

#### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

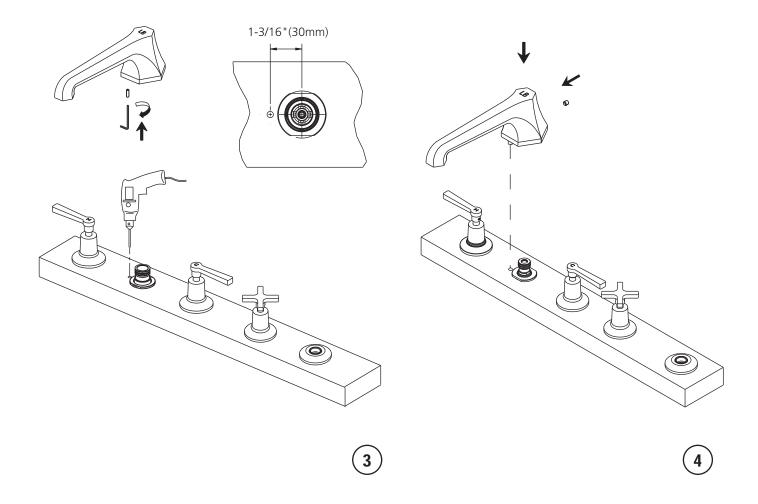


It is recommended that to prevent the spout from accidentally rotating after installation, where possible, the small brass pin should be screwed into the spout base.Drill a 1/4" (5.5mm) diameter hole into the deck to a depth of about 7/16" - 9/16" (11-15mm), following the position indicated in the figure above.

Place spout over spout hub and insert pin into the small hole on the deck. Finish installation by inserting set screw into access hole in back of spout and screw tightly.

## Steps 5

#### **Installation Procedure**

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

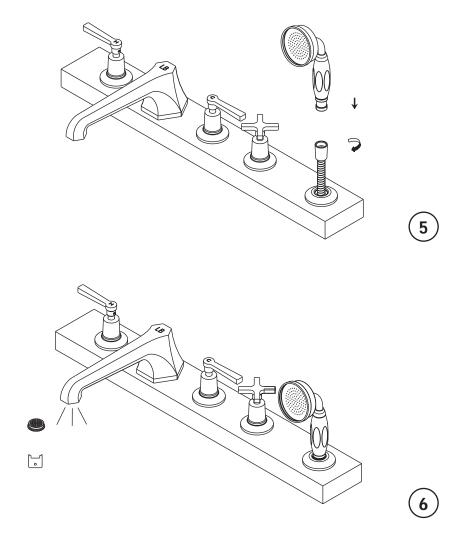


- Attach hand shower with final trim installation.
- After installing faucet, remove aerator and open the hot and cold supplies. Check for leaks. Turn on faucet handle for one minute to flush debris from faucet. Turn off the water supply, install the canopy and handle, then reassemble the aerator.

# **Exploded View**


#### **Parts List**

M1-2200 M1-2204 M1-2207

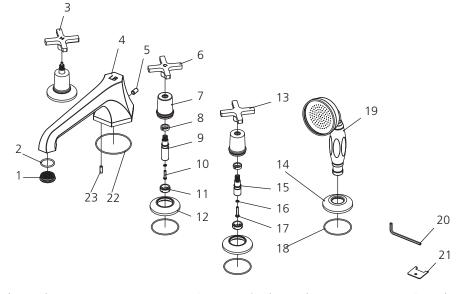

1	Aerator (500058)	9	Stem extension (110320)	17	Screw (008487)
2	O-ring (072091)	10	Screw (008486)	18	O-ring (004591)
3	Cross handle (hot) (029685H-T)	11	Adaptor (057507)	19	Hand shower (S2110309)
4	Spout (118553-50)	12	Escutcheon (215478)	20	Allen key (031011)
5	Screw (065027)	13	Diverter (029685-T)	21	Wrench for aerator (031214)
6	Cross handle (cold) (029685C-T)	14	Escutcheon (071433)	22	O-ring (072013)
7	Canopy (018209)	15	Adaptor (067196)	23	Set screw (292540)
8	Clip (012242)	16	Washer (013570)		

M1-2202 M1-2206 M1-2209

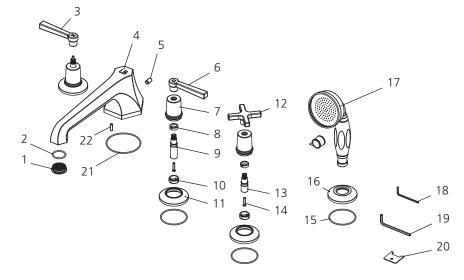

1	Aerator (500058)	9	Stem extension (110320)	17	Hand shower (S2110309)
2	O-ring (072091)	10	Adaptor (057507)	18	Allen key (031000)
3	Handle ( H ) (029686H-T)	11	Escutcheon (215478)	19	Allen key (031011)
4	Spout (118553-50)	12	Handle (029685-T)	20	Wrench (031214)
5	Screw (065027)	13	Stem extension (067196-T)	21	O-ring (072013)
6	Handle ( C ) (029686C-T)	14	Screw (008486)	22	Set screw (292540)
7	Canopy (018209)	15	O-ring (004591)		
8	Clip (012242)	16	Escutcheon (071433)		

#### For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177