



INSTALLATION INSTRUCTIONS

R1-4022

DECK BATH SPOUT ROUGH, TO SUIT M1-1029, M2-1029 & K1-1030

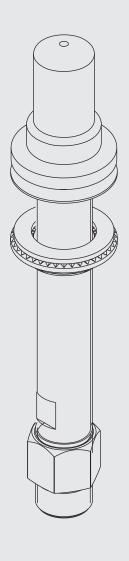

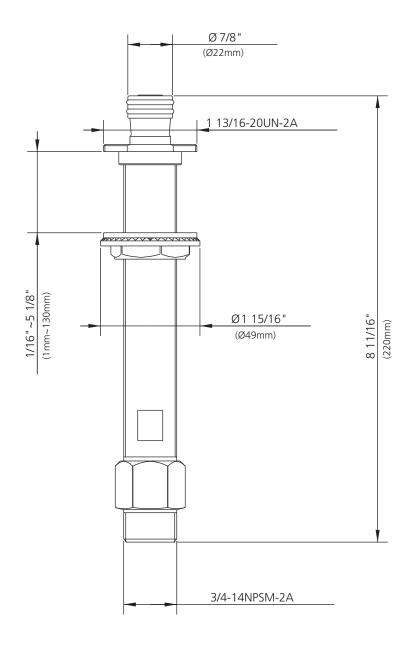

What you need to know

Tools:

Adjustable Wrench Groove Joint Pliers Hacksaw Phillips Screwdriver Pipe Tape Spatula Spirit Level



Maintenance

Your new bathroom faucet is designed for years of trouble-free performance.

Keep it looking new by cleaning it periodically with a soft cloth. Avoid abrasive cleaners, wire wool and harsh chemicals as these will dull the finish and void your warranty.

Safety Tips

If you are soldering during faucet installation, remove cartridges, seats, gaskets and washers prior to applying flame, otherwise you will void the warranty.

Cover drain openings to avoid losing small parts.

When cutting or soldering pipe, use safety glasses to protect your eyes.

Important Points

Prior to beginning installation. turn off the cold and hot water lines and open the old faucet to release built-up pressure.

Overtightening nuts may cause damage.

Wrap all threaded connections with pipe tape available at your local plumbing supply store. Always wrap in a clockwise direction. The fittings should be installed by a state-licenced plumber.

Please note:

When there is a difference in water pressure between hot and cold supplies to the mixing valve, the pressures should by equalized by a plumber in accordance with best practice and legislation.

Things You May Need

Correct installation may vary depending on previous faucet installation. All necessary supplies required for faucet installation are not included, but may be found where plumbing supplies are sold. It is suggested that IAPMO and/or CSA approved plumbing supplies are used during installation.

Standards

Meets A112.18.1


Please note:

Final achievable flow rate is dependent on the outlets fitted, see relevant outlets (spouts, roses, sprays) for fully assembled product flow rate.

Steps 1-2

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

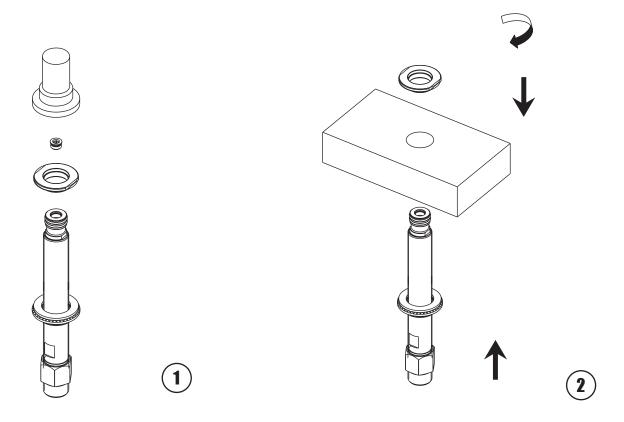



- Remove the protective bubble bag, cap, top mounting nut from body assembly, and remove plug from spout tube assembly.
- Install the body through mounting hole from below and attach top mounting nut from top.

Steps 3-4

Installation Procedure

Lefroy Brooks always recommends that plumbing products be installed by a licensed professional. Shut off main water supply before installation.

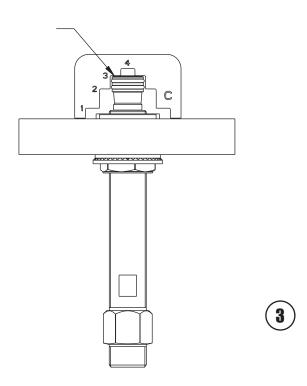

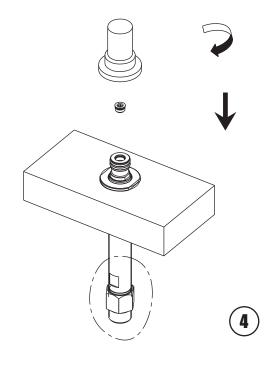

Adjust position of the body relying on specific gauge (A, B, C) supplied as the figure indicated to make sure it can fit with the trim in various ranges. After that, tighten fixing nuts from below by wrench. Gauge A (027105) for M2-1029. Gauge B (027104) for K1-1030. Gauge C (027107) for M1-1029.


Replace the protective bubble bag, body and spout protective caps/plug to prevent dirt ingress or water leakage during construction.

Warning! When installing flexible hose, please notice:

- 1. There should be no torsion or deformation
- 2. Do not fold into a V or L shape.
- 3. Do not use if there is any crack or deformation.

Exploded View

Parts List

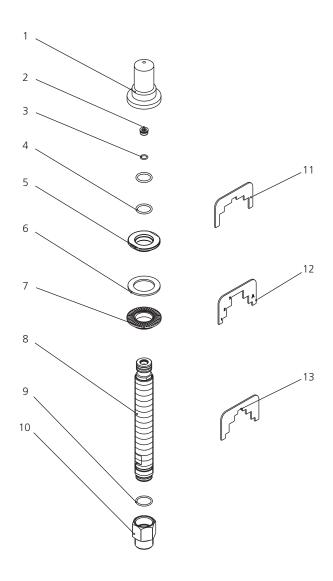

- Rubber protective cap (038103)
- Plug (028211) 2
- 3 O-ring (072060N)
- O-ring (063060) 4
- 5 Nut (009333)
- 6 Oil-seal (010023)
- 7 Nut (054027)
- 8 Shank (014581)
- O-ring (063091N)
- 10 Adaptor (039008)

- Gauge B (027104) 11
- 12 Gauge A (027105) 13
 - Gauge C (027107)

For additional assistance or service call

718-302-5292

9am to 5pm EST Monday to Friday



www.lefroybrooks.com

LEFROY BROOKS INC, 1828 TROUTMAN STREET, RIDGEWOOD, NY, 11385 TELEPHONE: 718-302-5292. FAX: 718-302-4177